

LAURA ASHLEY
HOME

wroughton
furniture

information and care guide

please read and retain for future reference

Afin d'obtenir ce guide en français, merci de vous rendre à cette adresse: http://www.lauraashley.com/page/care_guides

Hier finden Sie den Ratgeber in deutscher Sprache: http://www.lauraashley.com/page/care_guides

WROUGHTON FURNITURE

Laura Ashley furniture is craftsman made with great care and attention to produce distinctive pieces that will bring pleasure for years to come.

- With it's unfinished, raw look the Wroughton range is perfect for adding character and history to a room.
- Wroughton has a steel frame powder coated a dark pewter colour using a tough anti rust, environmentally friendly, water based paint.
- Glass panels are toughened glass.

With careful use these finely made pieces will give many years of satisfaction.

FEATURES OF STEEL FURNITURE

Due to the nature of metal items, small imperfections may occur as this furniture is handmade, and hand finished which add to the individuality of each piece.

LEVELLING, ASSEMBLY AND MOVING PRODUCTS

It is essential that your furniture is positioned on a level surface to ensure that the doors hang correctly and open smoothly and the item does not rock.

- Products with doors have adjustable feet to square the doors if the floor is not level follow the instructions included with your furniture if adjustment is necessary.
- If doors fail to operate smoothly, or the product is moved, levelling should be rechecked; either readjust the feet or level the corners (any suitable packing material may be used).
- Take care when moving products. We recommend they are lifted by two persons as dragging items across the floor will cause damage to the joints and may bend the frame.
- Large items which are assembled on site from multiple sections should be disassembled before relocation to a new position.
- Self Assembly items should be assembled at the intended location and lifted carefully into position.
- Assembled products from time to time require all fixings and joints tightening to prevent loosening which can create squeaks and movement, full instructions are enclosed with your product.

SUNLIGHT AND HEAT

- Avoid exposing your product to direct sunlight as this may prematurely fade the colour. In addition a minimum clearance of 30cm from heat sources is advised.
- We do not recommend locating products in excessively high or low temperatures, or where the environment is often damp as this may cause product issues. Use in hot and sunny conservatories is not recommended.

MAINTENANCE AND CARE INSTRUCTIONS

We recommend the purchase of a Guardsman Protection Plan* at time of ordering (exclusions apply), to offer extra peace of mind in case of accidents.

To prolong the life of your furniture we advise the following:

Maintenance

- To maintain the appearance of your product we recommend regular dusting with a soft cloth.
- Stubborn stains may be wiped with a soft cloth dampened with a mild detergent solution and dried with a lint-free cloth. Do not use abrasives or scouring creams.
- The repeated use of a polish containing silicone is not recommended, as it will lead to a build-up of a silicone film altering the appearance of the piece.
- Clean glass or mirrored panels using a non-solvent based glass cleaner and soft cloth, carefully avoiding contact with wooden or painted sections.
- Follow cleaning instructions carefully; spills should be removed immediately by blotting with a dry white cloth. If the spillage causes staining or the piece requires routine cleaning, we recommend a specialist cleaner.

Care - To Avoid Unnecessary Damage

- Protect delicate flooring from potential marking by feet or legs using felt pads or castor cups.
- Do not drop furniture onto corners or feet, or lean backwards on two legs as this will weaken and damage frames, feet or legs.
- Prevent sharp objects such as toys, buckles and heels from coming into contact with your furniture.
- Avoid contact with chemicals such as hair and skin preparations, fake tans, insect repellents and other cosmetics, or household cleaning materials other than those recommended as these may affect the finish.
- If your furniture becomes soiled, scratched, chipped or suffers other damage we recommend professional help is sought to restore it.
- If you have relevant insurance you may wish to contact your provider for advice. Alternatively a number of nationwide services are offered including Guardsman Home Services* 0845 6020789 or for cleaning Safeclean* on 0800 585 693.

Following the guidelines above will ensure product performance is maintained. Laura Ashley is not responsible for defects caused by the misuse of your product.

